

**FISHER & PAYKEL**

**BUILT-IN  
COFFEE MAKER**

---

**PROFESSIONAL**  
EB30PSX1 models

**USER GUIDE**  
**US CA**



## CONTENTS

---

Safety and warnings	4
Before you begin	7
Control panel	8
Accessories	9
First use	10
Coffee making guide	17
Steaming milk	22
Hot water	27
Custom drink settings	28
Customizing drinks	30
Settings	31
Auto start	33
Care and cleaning	34
Descaling	44
Water filter	47
Alerts	49
Troubleshooting	52
Warranty and service	54

---

### Registration

To register your product visit our website: [fisherpaykel.com/register](https://fisherpaykel.com/register)

### **⚠ WARNING!**



#### **Cut Hazard**

**Failure to use caution could result in injury.**

- Take care - some edges are sharp.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

### **WARNING!**

To reduce the risk of fire, electrical shock, injury to persons or damage when using the appliance, follow the important safety instructions listed below. Read all the instructions carefully before use. Use only for its intended purpose as described in these instructions.

#### **General**

- This appliance is for household use only.
- Make sure the voltage of your electrical system corresponds to the voltage shown on the bottom of the machine.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.
- Keep the appliance out of reach of children and do not leave appliance unattended while in operation.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the manufacturer may result in fire electrical shock, or personal injury.
- Do not use outdoors.
- Make sure the power cord does not hang over the edge of the table or counter-top to avoid getting accidentally caught or entangled.
- Do not place the appliance or its electrical parts on or near electric stoves, cooking surfaces, or gas burners.
- Plug cord into the wall outlet. To disconnect, first turn machine “off”, then remove plug from wall outlet.
- Do not use the appliance for other than the intended use. This appliance is to be utilized for domestic use only. The manufacturer declines all responsibility for any damage caused by improper, incorrect, or irresponsible use.
- **WARNING:** To reduce the risk of fire or electric shock, do not remove the cover or the exterior of the unit. Do not attempt to repair or modify the machine, doing so will void the warranty. Repair should be done by authorized service personnel only!
- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

## SAFETY AND WARNINGS

---

- Longer, detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. If the appliance is provided with 3- wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.
- The coffee system must be maintained daily to prevent the growth of harmful bacteria and mold. Please refer to 'Care and cleaning' section of the booklet.
- Important! Do not look directly or with an optical instrument into the lighting.
- Danger of burns! Risk of burns when dispensing hot beverages, they are extremely hot.
- Persons which lack physical, sensory or mental abilities or experience with the machine should not use it without supervision or instruction by a responsible person.
- Close supervision is necessary when any appliance is used by or near children.
- To avoid injuries allow the coffee system to cool before cleaning or putting on and taking off parts. Turn the machine off at the main switch when not in use and before cleaning.
- Only fill the water tank with cold, fresh tap water. Warm or hot water, or any other liquids may damage the machine.
- The water should be changed daily to prevent bacteria or mold growth.
- Do not use mineral water. Mineral water leads to heavy calcium build-up in the machine that can damage the unit.
- Do not fill anything but coffee beans into the beans container. Do not fill ground coffee in the beans container, it will damage the grinding unit.
- Sugar can damage the appliance! Caramelized or otherwise pre-treated coffee beans or other sugar containing beverages must not be put in the machine.
- Never place a cup with an alcohol-coffee mixture underneath the coffee dispenser. Plastic parts of the unit could catch fire!
- The hot water and steam dispensed could cause scalding. These functions must be used carefully. Never hold any parts of the body under the steam nozzle or the hot water dispenser. The machine must never be used to clean objects.
- Never use a steam cleaner to clean the appliance. Pressurized steam could damage electrical components and cause a short circuit.
- The appliances must be descaled regularly with the supplied descaling solution. In areas with very hard water the machine may need to be descaled more often. The manufacturer cannot be held responsible for damages resulting from insufficient descaling.
- Only use the supplied descaling solution. Take care to use the correct mixture of water and descaler, otherwise it may cause damage.
- Never make coffee, hot water or steam when the appliance is extracted. Always make sure the appliance is inactive before extracting it. Failure to observe this precaution could lead to damage to the appliance! The only exception is adjusting the coffee mill which must be done with the machine out (see the section 'Adjusting the coffee mill').
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To reduce the risk of fire, do not mount unit over or near any portion of a heating or cooking appliance.
- To reduce the risk of electric shock, do not mount over a sink.
- Do not allow children and animals to stop or linger near the appliance when it is pulled out of the cabinet.

## SAFETY AND WARNINGS

---

- Do not leave the machine pulled out of the cabinet when it is being used.
- Do not leave the machine pulled out of the cabinet when it is not needed.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Scalding may occur if the lid is removed during the brewing cycles.
- To disconnect, turn any control to “off,” then remove plug from wall outlet.


## SAVE THESE INSTRUCTIONS

**Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.**

## BEFORE YOU BEGIN

---

- Make sure the installer has completed the 'Final checklist' in the Installation instructions.
- Read this guide, taking special note of the 'Safety and warnings' section.
- Remove all internal and external packaging and dispose of it responsibly. Recycle items that you can.
- After removing the packaging, make sure the product is complete. If the appliance is damaged, contact customer support.
- Coffee has been used to factory test the appliance, so there may be traces of coffee in the mill.
- We recommend customising water hardness as soon as possible following the instructions in the section 'Setting water hardness'.

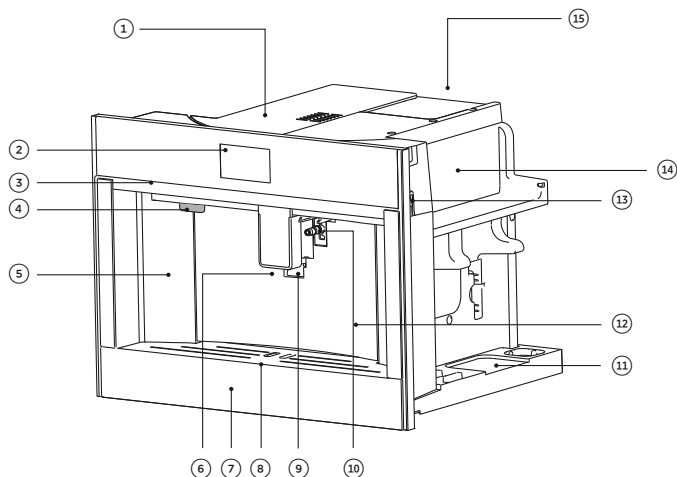


---

### Coffee machine features

---

- |  |                              |
|--|------------------------------|
| ① Beans container/ground coffee funnel | ⑨ Light                      |
| ② Control panel                        | ⑩ Hot water/steam connection |
| ③ Handle                               | ⑪ Accessories storage        |
| ④ Standby button                       | ⑫ Water tank                 |
| ⑤ Grounds container                    | ⑬ Main power switch          |
| ⑥ Coffee dispenser spouts              | ⑭ Cup warmer                 |
| ⑦ Lower door panel                     | ⑮ Power plug                 |
| ⑧ Drip tray                            |                              |

# CONTROL PANEL

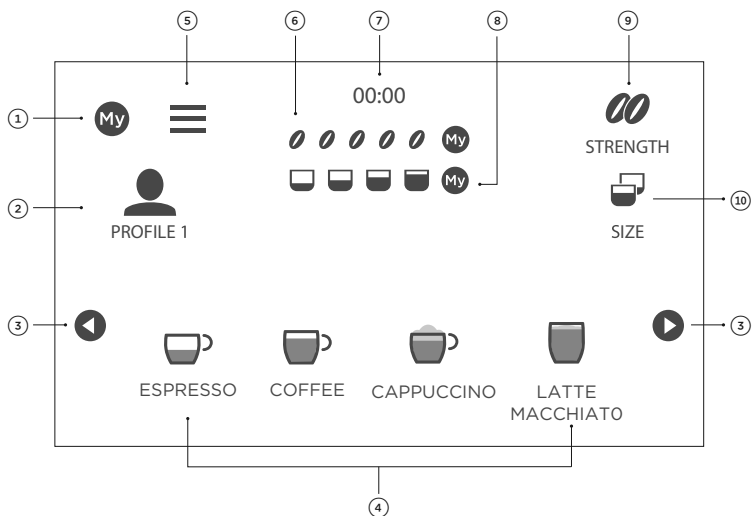


## Control panel features

- |                         |                      |
|-------------------------|----------------------|
| ① My menu               | ⑥ Coffee strength    |
| ② Customisable profiles | ⑦ Clock              |
| ③ Scroll arrows         | ⑧ Coffee size        |
| ④ Beverage selection    | ⑨ Strength selection |
| ⑤ Settings menu         | ⑩ Size selection     |

## Using the touch controls

Your coffee machine is operated using a touch keypad and display. To use the keypad to navigate between functions and settings, use the ball of your finger, not its tip. The controls respond to touch, so pressure is not needed.

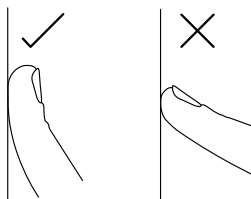




## ACCESSORIES

---



 
Water hardness  
indicator paper



Ground coffee  
measure



 
Descaler




Cleaning brush



 Water softener  
filter



Connection  
nozzle cover

 

Steam wand/  
Hot water spout




Milk container

# FIRST USE

## Setting a language


You'll need to select a language when your appliance is first turned on, or after a power cut.

1

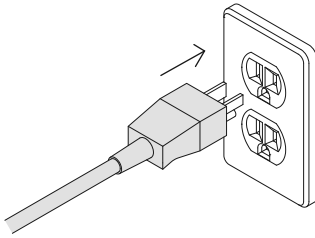


Connect the appliance to the mains electricity supply.

2

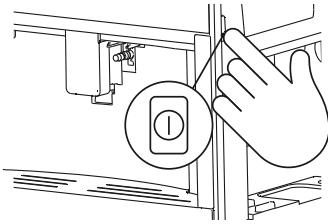

Ensure the main power switch at the side of the appliance is turned on.

3

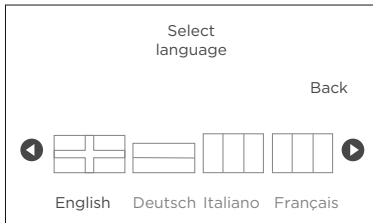


Touch ◀ or ▶ until the flag corresponding to the required language appears on the display. Touch the flag to select.

## FIRST USE


### Filling the water tank

Before making any coffee, you'll need to fill the water tank. For best results, we recommend filling the tank with fresh water each day.

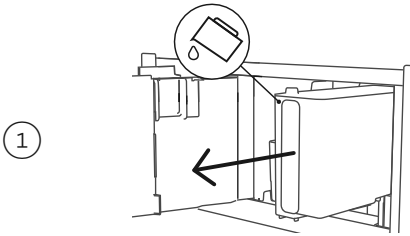


Pull the coffee dispenser forward to open the door.


Remove the water tank.

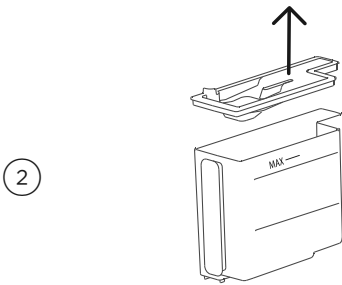

Remove the lid.

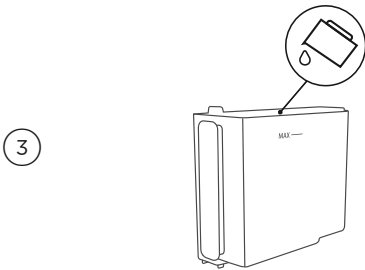

Fill with fresh water to the **MAX** line, then replace the lid.

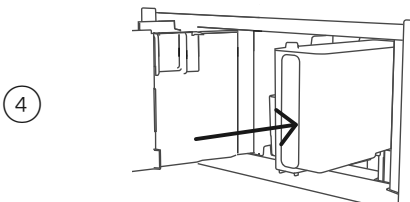


Place the water tank back inside the coffee maker, then close the door.

## FIRST USE


---

### Preparing the water circuit

The first time you fill the water tank, you'll also need to prepare the water circuit.

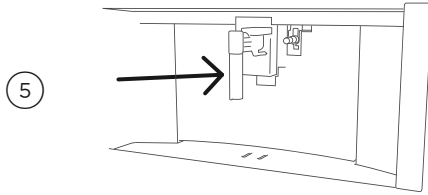

Connect the hot water spout to the appliance.

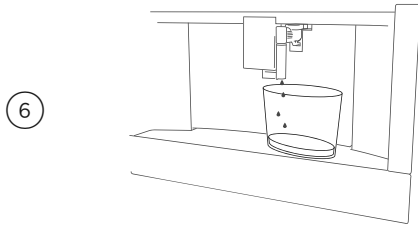

Place a container underneath the steam wand to catch any water.


Press ✓ to start filling the water circuit. Water will flow through the steam wand until the circuit is filled.

- When using the appliance for the first time, the water circuit is empty and the appliance could be noisy. This level of noise will reduce as the circuit fills.
- To improve the performance of your appliance, we recommend installing a water softener filter. If your model is not provided with a filter, we can request one from Customer Care.


# FIRST USE


## Turning the coffee maker on


When the coffee maker is turned on, it will run an automatic preheat and rinse cycle.

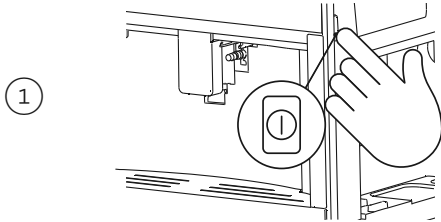

Ensure the main power switch at the side of the appliance is turned on.

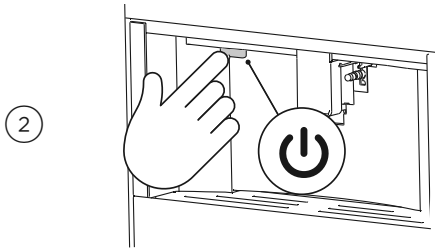

Press  to turn on the coffee maker. **HEATING UP UNDERWAY PLEASE WAIT** will appear on the display.

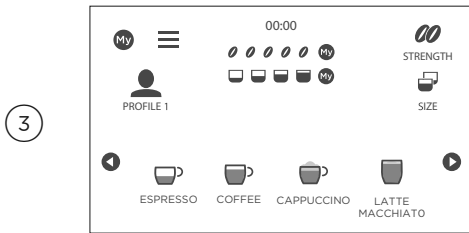

After preheating and rinsing, the display will return to the home screen.

The coffee maker is now ready to use.

During rinsing, a little hot water comes out of the coffee spouts and is collected in the drip tray underneath. During this cycle, keep hands clear of the spout to avoid contact with the water.

## FIRST USE


### Turning the coffee maker off

When the coffee maker is turned off, it will run an automatic rinse cycle.

To ensure that cleaning message prompts appear on the display as scheduled, we recommend leaving the coffee maker in standby mode.

If you will not be using the coffee maker for an extended period of time, turn the appliance off by pressing the main power switch.


Never press the main power switch while the appliance is running.

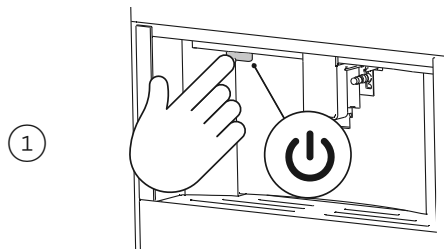

Press **⏻** to put the coffee maker into standby mode.

**TURNING OFF, PLEASE WAIT** will appear on the display.

The appliance will perform a rinse cycle before turning off.

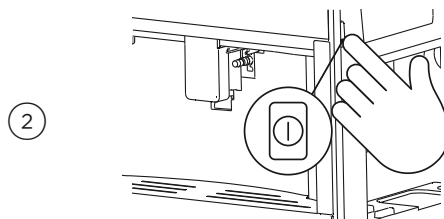

After the rinse cycle is finished, press the main power switch at the side of the appliance.

# FIRST USE


## Measuring and setting water hardness

Your coffee maker comes supplied with a water hardness indicator paper, to test the water hardness level in your home.

For best results, the water hardness level should be set before making coffee for the first time.


## Measuring water hardness

1

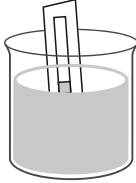



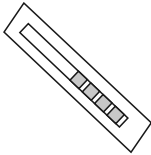

Remove the indicator paper from its pack. Immerse completely in glass of water for 1 second.

2



Remove the paper and shake lightly. Wait for 1 minute for the paper to develop. The number of red squares on the paper indicate the water hardness level.

## Water hardness level


	<b>STRENGTH</b>
	Level 1 (Soft water)
	Level 2 (Slightly hard water)
	Level 3 (Hard water)
	Level 4 (Very hard water)

# FIRST USE


## Setting water hardness

Once you have measured the water hardness in your home, you may need to adjust the water hardness level on your coffee maker.

The default setting is Level 4.

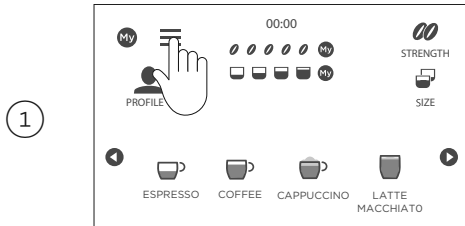

Touch **≡** to enter the settings menu.

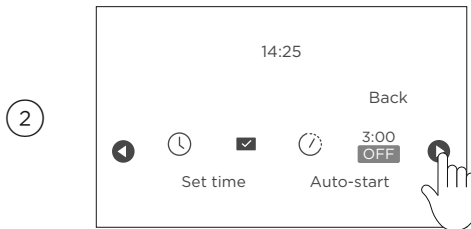

Touch **◀** or **▶** to scroll to the **WATER HARDNESS** setting.



To change the level selected, touch **WATER HARDNESS** until the required level is displayed.

Touch **BACK** to confirm and return to the home screen.



## COFFEE MAKING GUIDE

For best results, you'll need to condition your coffee maker before you start using it. To do this, make four to five coffees, until the appliance starts delivering a consistent result. While conditioning the coffee maker, it is normal to hear the sound of boiling water. After making a few coffees this noise should reduce.

You can make coffee using either whole beans or pre-ground coffee. You can make up to two coffees at a time using whole beans, or one cup at a time using pre-ground coffee.

For a creamier coffee, adjust the height of the coffee dispenser as close to the cup as possible.

### Tips for a hotter coffee

- Perform a rinse cycle by selecting the **RINSING** function in the settings menu.
- Warm the cups with hot water (see section 'Hot water').
- Increase the coffee temperature in the settings menu (see section 'Settings').

### Coffee strength






Adjust coffee strength according to your preference.

Select the required strength by pressing **STRENGTH**.

	<b>STRENGTH</b>
	Very Light
	Light
	Medium
	Strong
	Extra Strong
	Customized strength (if programmed)
	Pre-ground coffee

### Coffee size

Select the required size of coffee delivered by pressing **SIZE**.

	<b>SIZE</b>
	Small
	Medium
	Large
	Extra Large
	Customized size (if programmed)


# COFFEE MAKING GUIDE

## Using whole coffee beans

If using whole beans, you'll need to fill the beans container before making your coffee. When the container is empty, **FILL BEANS CONTAINER** will appear on the display.

Do not use green, caramelised or candied coffee beans as they may stick in the coffee mill and damage it.


1

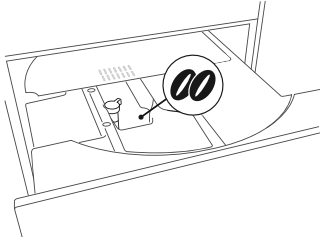

Pull the coffee maker out using the handle. Open the beans container cover and fill with coffee beans.


Close the cover and push the coffee maker back into place.

2

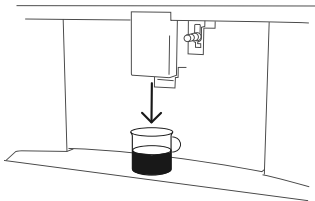


Place a cup under the coffee dispenser and adjust the dispenser height.

3

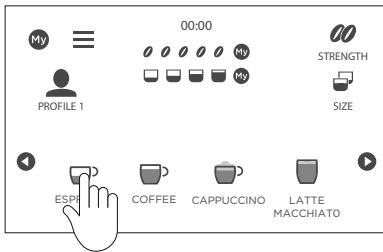

Touch ◀ or ▶ to scroll through the drink options. Touch the drink option to select.

4

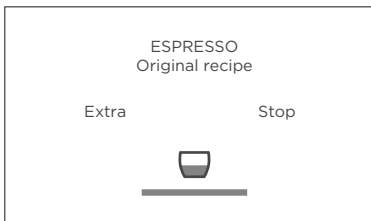

Your coffee is now being made.

When your coffee is ready, the display will revert back to the home screen.

# COFFEE MAKING GUIDE


## Using pre-ground coffee

If using pre-ground coffee, you'll need to add coffee each time you make a drink. Before adding ground coffee, ensure the funnel isn't blocked.

Never add ground coffee when the machine is off.

Never use more than one level measure as this may block the funnel.


1

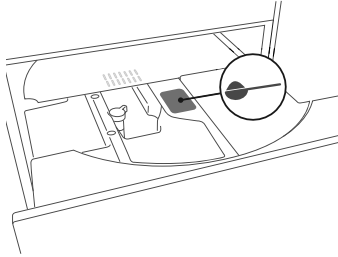

Pull the coffee maker out using the handle. Open the container cover and then the funnel cover.


Add one level measure of ground coffee. Close the cover and push the coffee maker back into place.

2

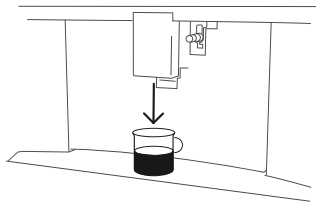


Place a cup under the coffee dispenser and adjust the dispenser height.

3

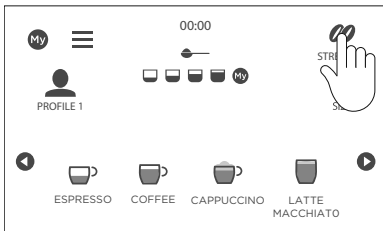

Touch **STRENGTH**  repeatedly until  appears on the display.

4

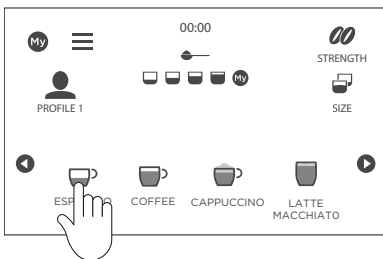


Select your coffee and touch to start.

## COFFEE MAKING GUIDE


If using pre-ground coffee to make a long coffee, you may need to add an extra measure of coffee partway through the drink dispensing.

1

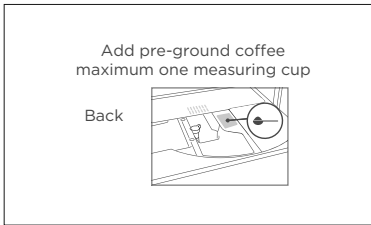

Halfway through dispensing, **ADD PRE-GROUND COFFEE, MAXIMUM ONE MEASURE** will appear on the display.

2

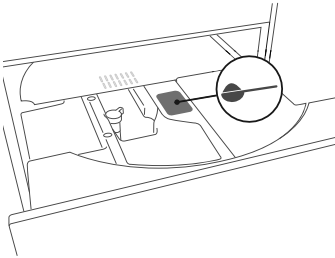


Pull the coffee maker out and add one level measure of ground coffee.

Close the cover and push the coffee maker back into place.

Coffee dispensing will resume.

## COFFEE MAKING GUIDE

### To cancel

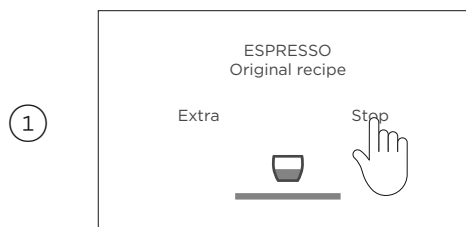


Touch **STOP** at any point to stop.

### To top up



At the end of coffee dispensing, touch **EXTRA** to top up your drink. When the desired size is reached, press **CANCEL**.

### Adjusting the coffee mill

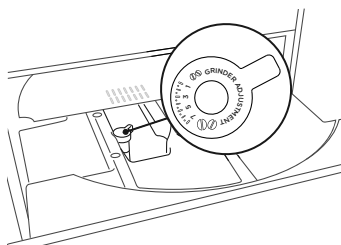

The coffee mill is set by default to prepare coffee correctly and should not require adjusting initially.

If after making the first few drinks you find that the coffee is too weak, not creamy enough or delivery is too slow (a drop at a time), this can be corrected by adjusting the grinding adjustment dial.

- The grinding adjustment dial must only be turned when the coffee mill is in operation during the initial phase of coffee preparation.
- If coffee is dispensed too slowly or not at all, turn one position clockwise towards 7.
- For fuller-bodied, creamier coffee, turn one position counterclockwise towards 1.
- When adjusting, do not turn the dial more than one position at a time.
- These adjustments will only be evident until after making at least two cups of coffee. If this adjustment does not obtain the desired result, repeat the process and adjust the dial to the next position.

## STEAMING MILK

---

### Steaming milk

To make cappuccinos, lattes and other milk-based drinks, you can steam milk either automatically using the milk container attachment, or manually using the steam wand attachment.

For best results, use refrigerated, skimmed milk at about 41°F (5°C) temperature. The warmer the milk, the less foam is produced.

### Steaming milk automatically

- Use the milk container attachment to automatically make cappuccinos, lattes and other milk-based drinks.
- Do not leave the milk container out of the refrigerator for long periods of time.
- To avoid milk with poor foam or large bubbles, always clean the milk container lid and connection nozzle as described in sections 'Cleaning the milk container' and 'Cleaning the steam wand'.
- If **ENERGY SAVING** mode is enabled, you may have to wait a few seconds before the milk begins heating.

### Adjusting the foam level

 
Turn the froth adjustment dial on the milk container lid to adjust the amount of foam delivered while making milk-based coffees. Follow the recommendations in the table below:

DIAL POSITION	FROTH	RECOMMENDED FOR
	None	Latte / Hot milk
	Minimum	Latte or Macchiato
	Maximum	Cappuccino

# STEAMING MILK


## Filling the milk container

1




Remove the lid of the milk container.

2

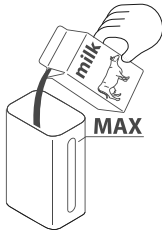


Fill the milk container with a sufficient quantity of milk, not exceeding the **MAX** level marked on the container. Each mark on the side of the container corresponds to about 3.38 fl. oz. of milk.

3

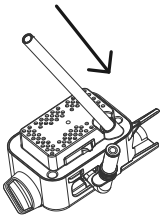

Make sure the milk intake tube is correctly inserted in the bottom of the milk container lid.  
Replace the lid on the milk container.

4

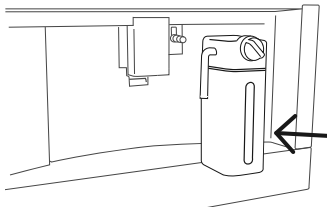


Remove the steam wand if it is attached.  
Attach the milk container to the steam wand connection. Push in until the container clicks into place.

# STEAMING MILK


## Making milk-based coffees automatically

1

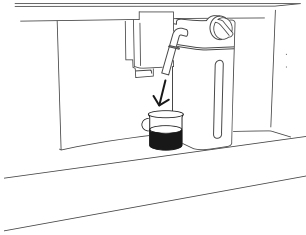


Fill the milk container and attach it. Position the cup under both the coffee dispenser and the milk spout. Adjust the length of the milk spout if needed.

2

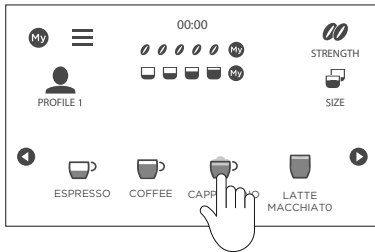

Select the desired drink option.

3

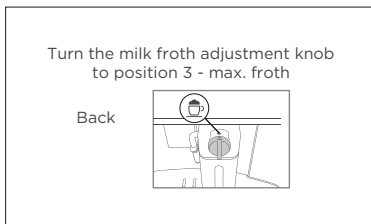

Turn the dial on the milk container lid to the corresponding drink option. Touch ✓ to confirm.




## STEAMING MILK

---

### To cancel


1

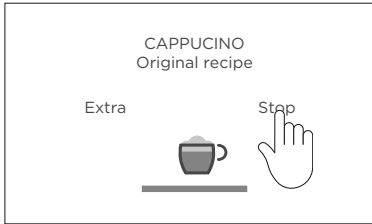

Touch **BACK** to exit the drink selection.  
Touch **STOP** at any point to stop.

### To top up

1

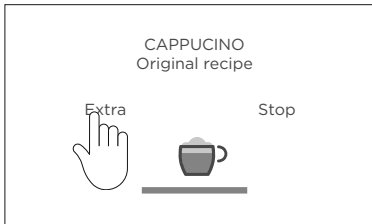

At the end of coffee dispensing, touch **EXTRA** to top up your drink. When the desired size is reached, press **STOP**.


# STEAMING MILK

## Steaming milk manually

- Use the steam wand attachment to manually make cappuccinos, lattes and other milk-based drinks.
- Choose an appropriately-sized container. The milk will double or triple in volume as it is steamed.
- For best results, use refrigerated, skimmed milk at about 41°F (5°C) temperature. The warmer the milk, the less foam is produced.
- For a creamier froth, rotate the container with slow movements in an upward direction.
- To avoid milk with poor foam or large bubbles, always clean the spout as directed.
- The steam wand can also be used to heat water.


**Do not leave the appliance unattended while steam is being delivered. Always stop steam delivery before extracting the container filled with liquid to avoid burns from splashes.**

1

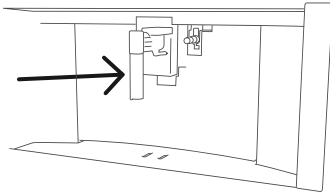


Make sure the steam wand is attached correctly to the coffee maker.

2

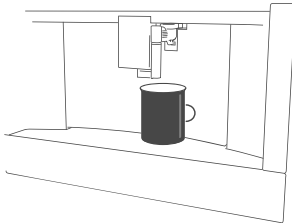


Fill a container with milk or water to be and immerse the spout in the liquid.

3

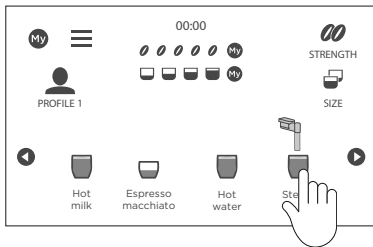

Select **STEAM** from the drink options. After a few seconds, steam will start to dispense and heat the liquid.

4

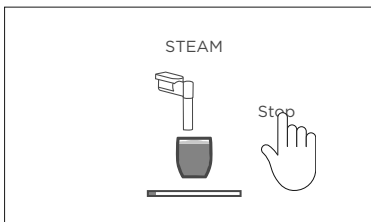


When the desired temperature or level of foam is reached, touch **STOP** to stop.

# HOT WATER


## Dispensing hot water

Use the steam wand to dispense hot water.


**Do not leave the appliance unattended while dispensing hot water.**

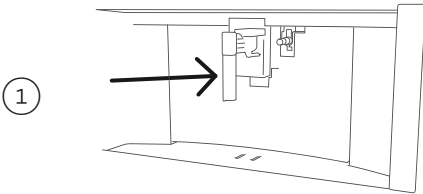

Make sure the steam wand is attached correctly to the coffee maker.

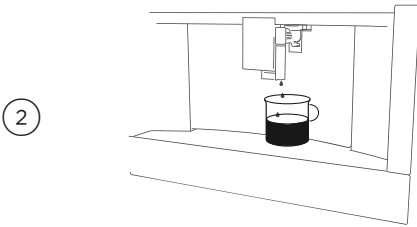


Place a container under the spout. Position it as close as possible to avoid splashes.

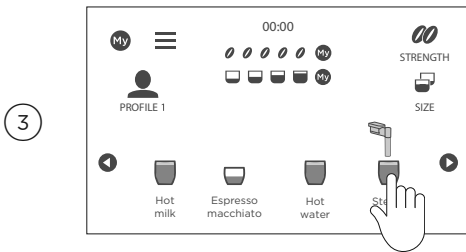

Select **HOT WATER** from the drink options. Hot water will begin dispensing from the spout and will stop automatically.

## To cancel

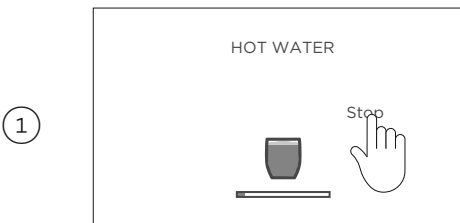


Touch **STOP** at any point to stop.

## CUSTOM DRINK SETTINGS


Drinks can be customized by altering the strength and size of coffee delivered. You can save custom drink settings for up to six **MY** profiles.

Select the **GUEST** profile to make drinks using the default settings.

### Selecting a profile

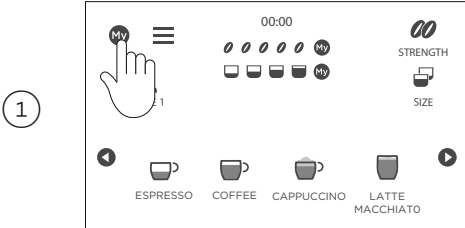

Press **My**

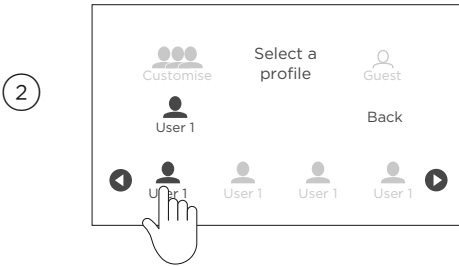

Select the desired profile, then press **BACK** to return to the home screen.


You can now modify drink options for the selected profile.

# CUSTOM DRINK SETTINGS

## Customizing a profile


Make sure the profile you want to customize is active. The current profile will be displayed on the home screen.

1

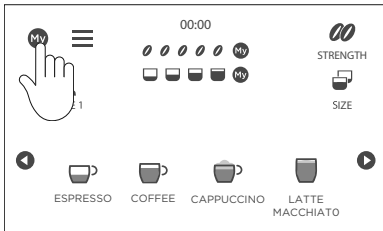


From the home screen, press **MY**.

2

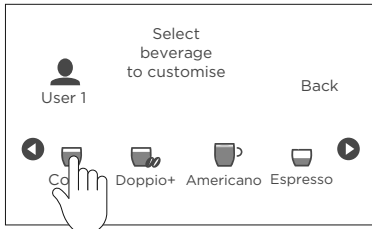


Select a drink to customize.  
The corresponding accessories must be attached.

3

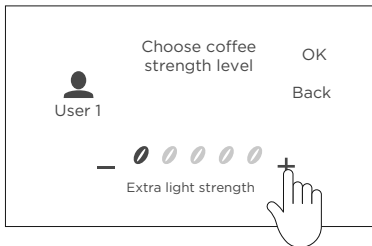


Set the desired coffee strength, then press **OK**.

4

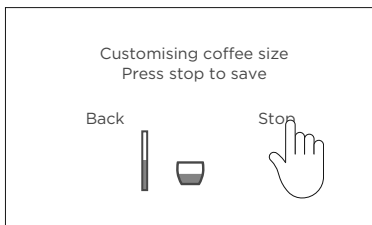

Set the desired coffee size, and for milk-based drinks the desired amount of milk.  
When the desired size is reached, press **STOP**.

5

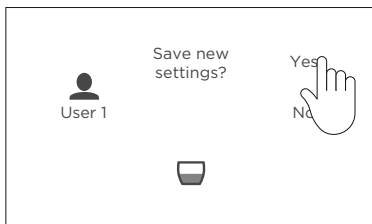

Press **YES** to save new settings, then **OK** to return to the home screen.

## CUSTOMIZING DRINKS

---

### Custom drink sizes

BEVERAGE	STANDARD	CUSTOM
	fl oz (ml)	fl oz (ml)
Espresso	1.35 (40)	0.68 - 2.71 (20 - 80)
Long	5.41 (160)	3.89 - 8.45 (115 - 250)
Coffee	6.07 (180)	3.38 - 8.12 (100 - 240)
Double espresso	4.06 (120)	2.71 - 6.09 (80 - 180)
Hot water	8.45 (250)	0.68 - 14.20 (20 - 420)

## SETTINGS

---


The settings menu allows you to:


- Rinse the coffee spouts with water
- Descale the coffee maker
- Install or replace the water filter
- View custom drink settings and reset back to default
- Change the time
- Set **AUTO START** to turn the appliance on at a certain time each day
- Adjust **AUTO OFF** to turn the appliance off after a certain amount of time
- Turn the cup warmer on or off
- Enable or disable **ENERGY SAVING** to reduce energy consumption
- Adjust the temperature of the water used to make coffee
- Adjust the water hardness setting
- Change the language of the display
- Turn audio tones on or off
- Turn coffee lights on or off
- Adjust the display background
- Enable or disable **DEMO MODE** (for servicing only)
- Restore all settings to factory original defaults
- View your appliance statistics

# SETTINGS


## Changing the settings

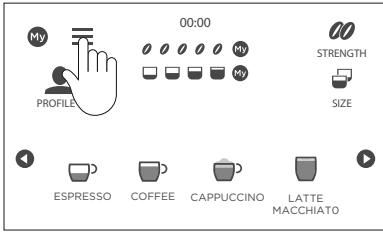

1




Touch  to enter the settings menu.

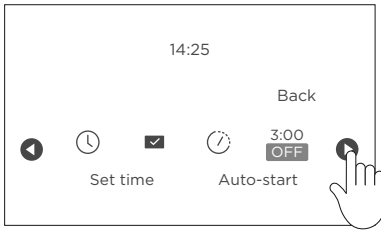
2




Touch  or  to scroll to the desired setting.

3

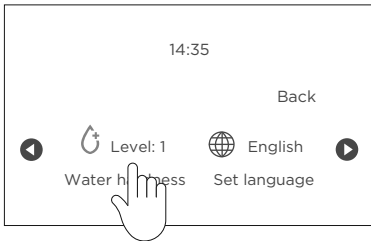

Either touch the setting to adjust or select  to turn on or off.

4

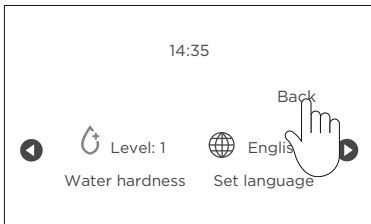

Touch **BACK** to exit the menu and return to the home screen.




# AUTO START

## Auto-start


You can set **AUTO START** to have the appliance ready at a certain time of day (eg in the morning), so that the appliance is ready to make coffee immediately.

To enable **AUTO START**, the time must already be set correctly.

If the mains power switch is turned off, **AUTO START** will be cancelled.

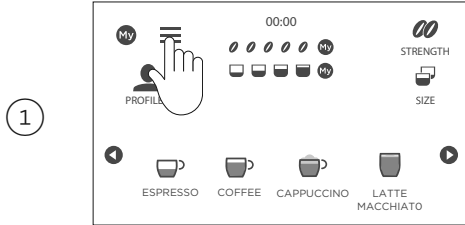


Press to enter the settings menu.

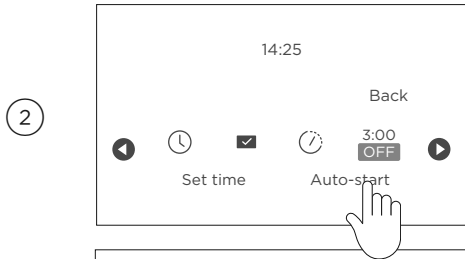


Touch or until **AUTO START** appears on the display.

Select **AUTO START**.

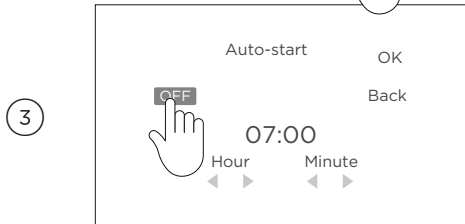


Touch **OFF** to enable **AUTO START**, then set a time of day. The coffee maker will automatically turn on and preheat at the set time.

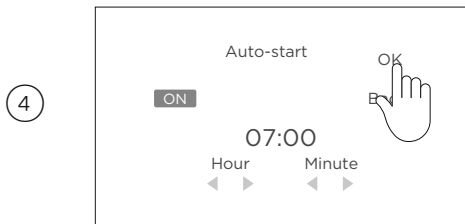

Touch **OK** to confirm, then **BACK** to exit the settings menu.

## To cancel

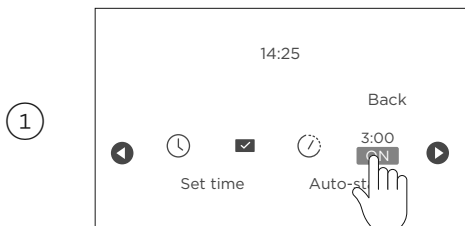

Enter the settings menu and select **AUTO START**.

Touch **ON** to turn off **AUTO START**, then **BACK** to exit.


## CARE AND CLEANING

- Do not use solvents, abrasive detergents or alcohol to clean the coffee maker. You do not need to use chemical products to clean the machine.
- None of the components of the appliance can be washed in a dishwasher with the exception of the milk container.
- Do not use metal objects to remove coffee deposits as they could scratch metal or plastic surfaces.

### Emptying the coffee grounds container and drip tray


When the coffee grounds container is full, you'll need to empty and clean it before you can continue using the appliance. Even if the grounds container isn't full, it will still need to be emptied and cleaned every regularly. We recommend doing this every couple of days.

#### To empty

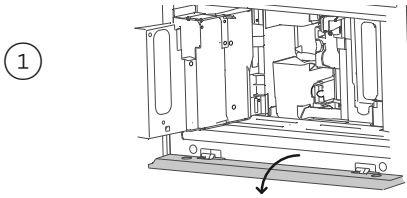

**EMPTY GROUNDS CONTAINER** will appear on the display.

Open the door and drop the lower trim to access the drip tray and grounds container.

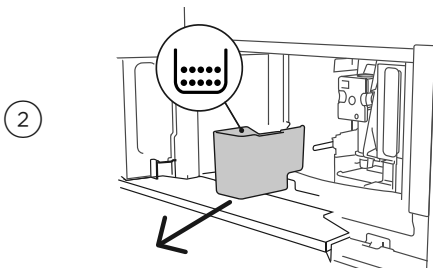

Remove the grounds container, empty and clean. Ensure all coffee residue is removed, using the spatula or the brush provided.


Replace the drip tray and coffee grounds container and close the appliance door.

## CARE AND CLEANING

### Emptying the drip tray


The drip tray is fitted with a red level indicator. Before the indicator protrudes, the drip tray must be emptied and cleaned, otherwise the water may overflow.

1

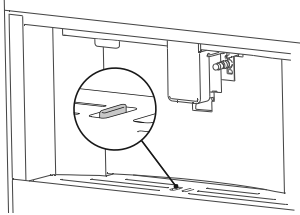


Check the drip tray. If the red indicator is protruding, it will need to be emptied.

2

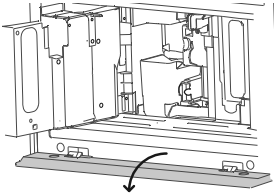

Open the door and drop the lower trim to access the drip tray and grounds container.

3

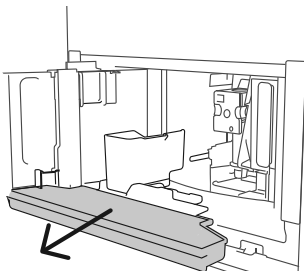

Remove the drip tray and grounds container, empty and clean.

When removing the drip tray, the grounds container must be emptied too, even if it contains few grounds. If this is not done, the grounds container may fill up more than expected the next time the appliance is used.


## CARE AND CLEANING

---

### Cleaning the inside of the coffee maker

Before cleaning internal parts, the appliance must be turned off (see section 'Turning the coffee maker off') and unplugged from the mains power supply. Never immerse the the appliance in water.

Check regularly (about once a month) that the inside of the appliance is not dirty. To access the inside of the coffee maker, remove the grounds container and drip tray.

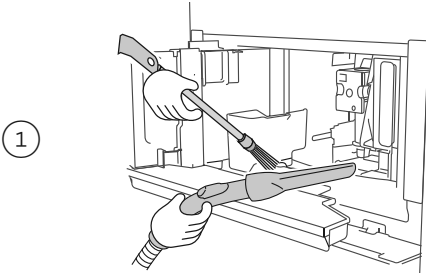

If necessary, remove coffee deposits with the brush supplied and a sponge. Remove remaining residue with a vacuum cleaner.

### Cleaning the pre-ground coffee funnel

Check regularly (about once a month) that the pre-ground coffee funnel is not blocked. If necessary, remove coffee deposits with the brush supplied.

### Cleaning the water tank

Clean the water tank regularly (about once a month) and whenever you replace the water softener filter (if fitted).

Clean with a damp cloth and dishwashing liquid, then rinse thoroughly before refilling and replacing back in the appliance.


If the water filter is fitted, remove and rinse with fresh running water. After replacing, you'll need to run the machine once to reactivate the filter.

## CARE AND CLEANING

---


### Cleaning the coffee spouts

1

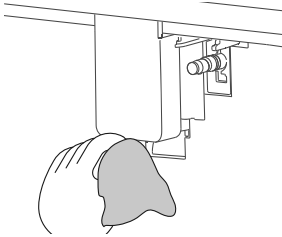

Clean the coffee spouts regularly with a sponge or cloth.

2

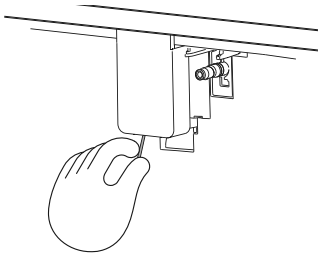


Check that the holes in the coffee spouts are not blocked. If necessary, remove coffee deposits with a toothpick.


## CARE AND CLEANING

### Cleaning the infuser


The infuser must be cleaned at least once a month.

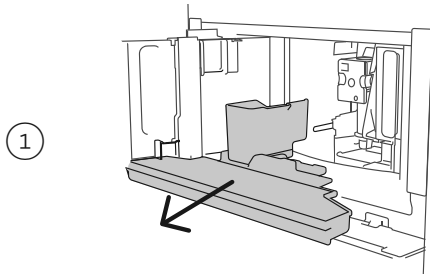


Remove the drip tray and coffee grounds container.

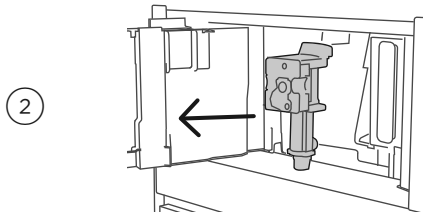

Press the two coloured release buttons on the infuser inwards and pull to remove. Soak the infuser in water for about five minutes, then rinse.

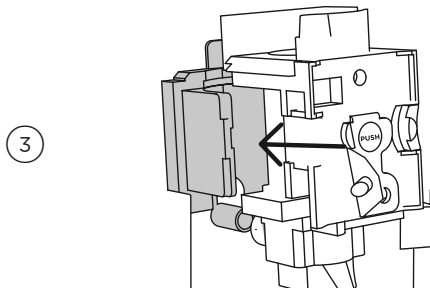

 After cleaning, replace the infuser by sliding it onto the internal support and pin at the bottom, then push the **PUSH** symbol fully in until it clicks into place. Replace the drip tray and coffee grounds container.



If you are having difficulty reinserting the infuser, you may need to adjust it slightly by pushing from the top and bottom.

- The infuser must not be removed when the appliance is on. Do not use force to remove the infuser.
- Do not use dishwashing liquid to clean the infuser as it will remove the lubricant inside the piston.
- When reinserting, ensure the two release buttons have snapped back out into place.

## CARE AND CLEANING

---


### Cleaning the milk container

Each time the milk container needs to be refilled, take it apart and clean the components. Wash all components thoroughly with hot water and dishwashing liquid. All components except for the thermal casing are dishwasher safe.

Each time you refill the milk container, also clean the steam connection nozzle with a sponge to remove any milk residue.

When making a number of cappuccinos or milk based coffees, clean the milk container after you have prepared the last beverage.


**The thermal casing must not be filled with or immersed in water. Clean with a damp cloth only.**

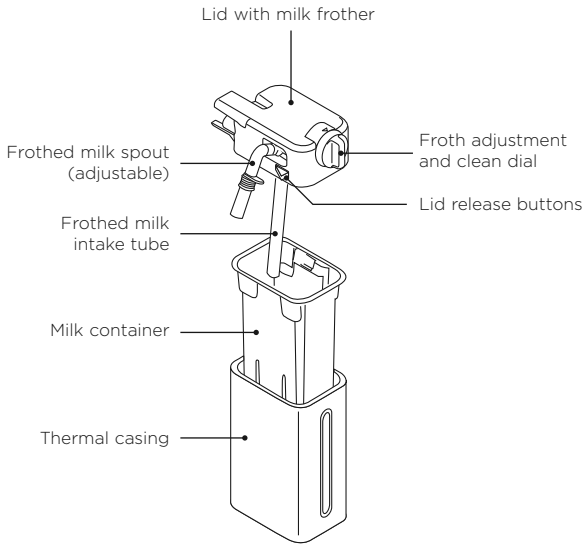

## CARE AND CLEANING


---

1

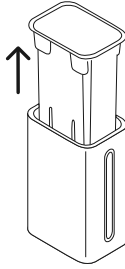


Remove the milk container from the thermal casing, holding it by the two side grips.

2

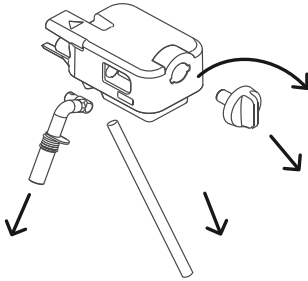


Remove the milk spout and intake tube. Turn the froth adjustment dial clockwise to the **INSERT** position and pull off.

3

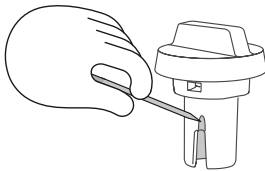

Ensure there is no milk residue in the hollow and groove under the dial. If needed, scrape with a toothpick to remove. Rinse inside the froth adjustment dial seat and the milk frother connector hole.

4

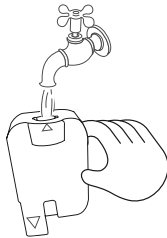

Check that the intake tube and spout are not clogged.

Replace all components. Reposition the dial (lining up the arrow with the **INSERT** marker), and reinsert the spout and milk intake tube.




## CARE AND CLEANING

### Cleaning the milk frother

Each time you use the milk container, you'll need to run a clean cycle afterwards to clean the milk frother components.


2

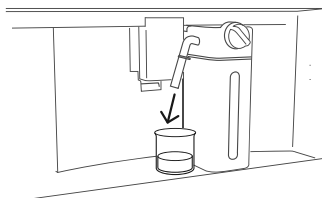

Leave the milk container in the machine (you do not need to empty it).

Place a cup or other container under the spout.


3

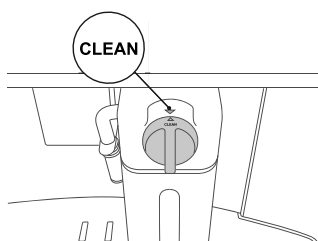

Turn the adjustment dial to **CLEAN**.


**CLEANING MILK CONTAINER UNDERWAY** will appear on the screen.

4

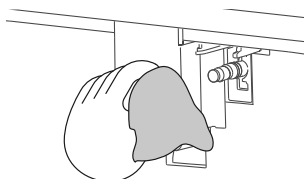

When the clean cycle is finished, remove the milk container and clean the steam connection nozzle with a sponge.

The milk container can be stored in the refrigerator, or if empty taken apart for further cleaning.

- When making a number of cappuccinos or milk based coffees, clean the milk container after you have prepared the last beverage only. To proceed with making the next beverages, when the **CLEAN** message is displayed, press **BACK**.
- If you do not clean the milk container,  will appear on the screen to remind you that it needs cleaning.
- In some cases, before cleaning you must wait for the appliance to heat up.


**When cleaning the internal tubes of the milk container, a little hot water and steam may leak out of the frothed milk spout. Take care to avoid burns from hot splashes of water.**

## CARE AND CLEANING


### Cleaning the steam wand

Clean the steam wand after every use to avoid the build-up of milk residue and prevent it from clogging.

Wash all parts of the spout thoroughly with a sponge and warm water.

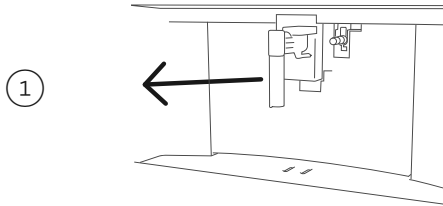


Place a container under the steam wand and dispense a small amount of water.

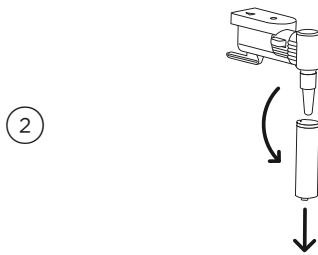

Wait a few minutes for the spout to cool down, then extract.

Hold the spout with one hand and with the other, turn the end of the spout and pull it downwards.

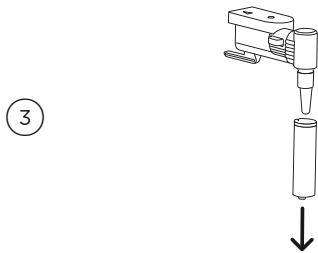

Remove the steam connection nozzle by pulling it downwards.

Check the hole in the connection nozzle is not blocked. If necessary, clean using a toothpick.

Replace all components. Insert the steam connection nozzle, then the steam wand spout by pushing it upwards and turning it clockwise until firmly in place.

## CARE AND CLEANING

### Rinsing the coffee maker


Use the **RINSING** cycle to dispense hot water from the coffee spouts and steam wand, to clean and heat the appliance's internal circuit.

If the appliance is not used for more than four days, when switched on again, we recommend performing three rinses before use.


After cleaning, it is normal for the grounds container to contain water.

**Do not run this cycle without a container placed under the coffee and water spouts.**

**Do not leave the appliance unattended while dispensing hot water.**

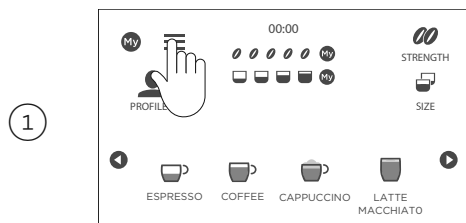

Touch **☰** to enter the settings menu.

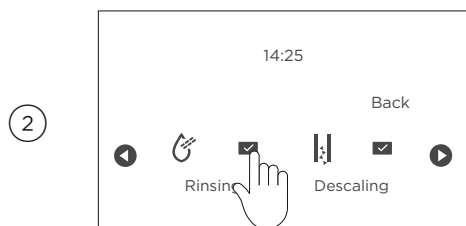

Touch **◀** or **▶** to scroll to **RINSING**, then press **✓** to start.

After a few seconds, hot water will be dispensed from the coffee spouts.

When the cycle has finished the display will revert to the home screen.

### To cancel

Touch **CANCEL** at any point to stop the rinsing cycle.

## DESCALING


For best results, descale the coffee maker as soon as possible after the descale alert is shown. The descale process takes approximately 45 minutes.

You will need a 85 fl oz (2.5L) container for the water to empty into. Make sure the water dispensing spout is fitted during this process.

**Take care while handling descaling solution and while running the descale cycle. We recommend wearing gloves during this process and to avoid contact with the skin.**


**Do not leave the appliance unattended while rinsing or emptying.**

### To descale

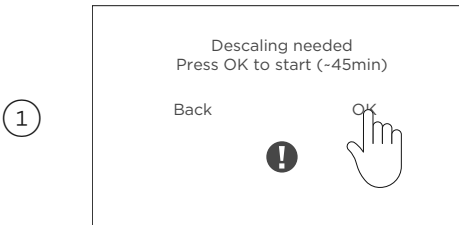

**DESCALING NEEDED** will appear on screen. Press **OK** to start immediately, or **BACK** to start later.


To start the cycle later, go to the settings menu.

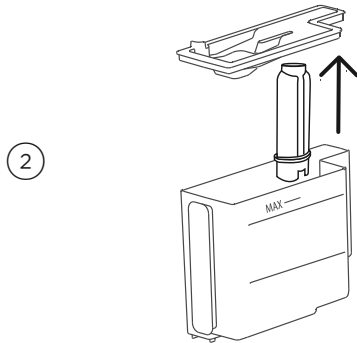

Follow the instructions on the screen.

Remove the water tank and water filter (if fitted) and empty.

Press **NEXT**.

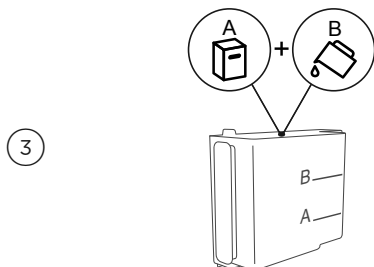


Add descaling solution to the water tank, following the instructions on the screen. Place water tank back in the appliance.

Press **NEXT**.


## DESCALING

4

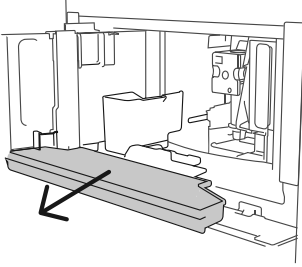

Empty the grounds container and drip tray, then replace.

5

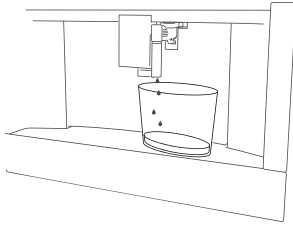

Place a 85 fl oz (2.5L) container under the coffee and water spouts.


Press **OK** to start, then **✓** to confirm descaling solution has been added.

The coffee maker will begin descaling.

### Rinsing

After descaling, the coffee maker will need to run at least two rinse cycles to ensure the descaling solution has been completely flushed from the internal circuits.

1

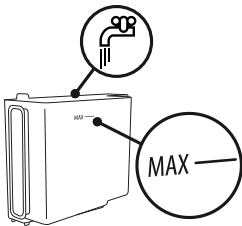


After approximately 25 minutes, descaling will stop.

Empty out the container and remove and rinse the water tank.

Fill the tank with fresh clean water up to **MAX** level and replace.

2

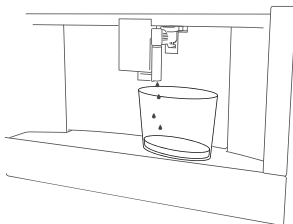

Place the 85 fl oz (2.5L) container back under the coffee and water spouts.


Press **OK** to start.

The coffee maker will begin rinsing.

## DESCALING

When the water in the tank has run out, empty out the container before running the second rinse cycle.

1

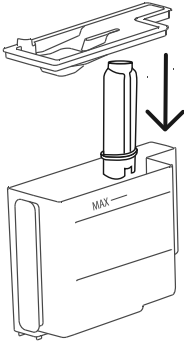


Remove and rinse the water tank.

Replace the water filter (if using) and fill the tank up to **MAX** level.

Press **NEXT**.

2

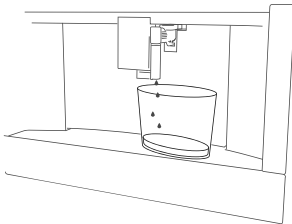


Place the 85 fl oz (2.5L) container back under the coffee and water spouts.

Press **OK** to start.

The coffee maker will begin rinsing again.

3

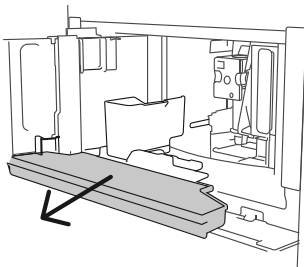

At the end of rinsing, empty the grounds container and drip tray then replace.

Descaling is now complete and the coffee maker is ready to use again.

- If the descaling cycle is not completed correctly, eg due to a power cut, we recommend repeating the cycle.
- If the water tank has not been filled to the **MAX** level, you may need to do a third rinse to ensure the descaling solution has been completely flushed from the machine's internal circuits. Before starting the rinse cycle, remember to empty the drip tray.
- After descaling, it is normal for the grounds container to contain water.
- If you live in an area with very hard water, the descaling alert may appear at very short intervals. This is part of normal operation.

# WATER FILTER


Certain models are fitted with a water softener filter. If this is not the case with your model, we recommend purchasing one from an approved supplier.

The filter lasts approximately two months if the appliance is used regularly. If the coffee maker is left unused with the filter installed, it will last a maximum of three weeks.

## Installing the filter


Remove the filter from the packaging.

1

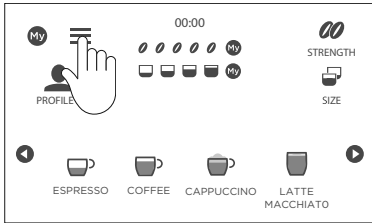


Press

2

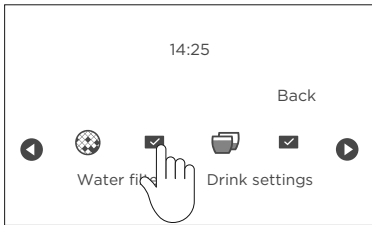

Press or until **WATER FILTER** appears.  
Press to enter.

3

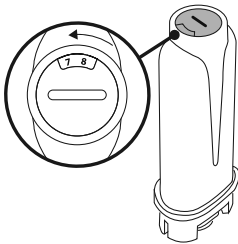

Follow the instructions on the screen.  
Turn the date indicator disk until the next two months of the year are displayed.  
Press **NEXT**.

4




To activate the filter, run tap water through the hole in the filter, until water comes out of the openings at the side for more than a minute.

Press **NEXT**.

## WATER FILTER


5

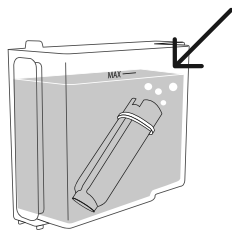

Remove the water tank and fill with fresh water. Place the filter in the tank, immersing completely for about ten seconds.

Allow any air bubbles to escape, then press **NEXT**.

6

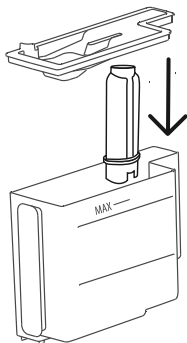


Insert the filter into the filter housing, pushing in as far as it will go.

Replace the tank lid, then place the tank back in the appliance.

Press **NEXT**.

7

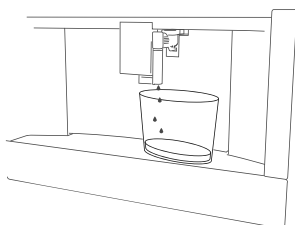

Place a 85 fl oz (2.5L) container under the coffee and water spouts.

Press **OK** to start.

The coffee maker will begin rinsing. Once rinsing is complete, the coffee maker is ready to use.

### Replacing the filter

**REPLACE WATER FILTER** will appear on the screen when a new filter is needed. Remove the old filter, then follow the instructions above to install a new one.

We recommend replacing the filter every two months or if the appliance has not been used for three weeks, even if **REPLACE WATER FILTER** hasn't appeared on the screen. To do this, go to the **WATER FILTER** setting and select **REPLACE WATER FILTER**, then follow the instructions on the screen.

### Removing the filter







To remove the filter, go to the **WATER FILTER** setting and select **REMOVE WATER FILTER**. Follow the instructions on the screen to remove.



## ALERTS

DISPLAYED MESSAGE	POSSIBLE CAUSE	WHAT TO DO
Fill tank with fresh water	Insufficient water in the tank.	Fill the tank with water and ensure that it is inserted correctly, pushing it as far as it will go until it clicks into place.
Insert water tank	The tank is not correctly in place.	Insert the tank correctly and press as far as it will go.
Empty grounds container	The grounds container is full.	Empty the grounds container and drip tray, clean and place it back in the appliance. Note: when removing the drip tray, the grounds container must be emptied, even if it contains few grounds. If this is not done, when you make the next drinks, the grounds container may fill up more than expected and clog the machine.
Insert grounds container	After cleaning, the grounds container has not been re-inserted.	Remove the drip tray and insert the grounds container.
Add pre-ground coffee, coffee max. 1 Measure	The 'pre-ground coffee' function has been selected without placing any pre-ground coffee in the funnel.	Place pre-ground coffee in the funnel and repeat delivery.
	The pre-ground coffee funnel is clogged.	Empty the funnel. See section 'Cleaning the pre-ground coffee funnel'.
Add coffee, coffee max. 1 Measure	A long coffee with pre-ground coffee has been requested.	Place pre-ground coffee in the funnel and press <b>OK</b> to continue and complete delivery.
Fill beans container	The coffee beans have run out.	Fill the beans container.
Select a milder taste or reduce pre-ground coffee quantity	Too much coffee has been used.	Select a milder strength by pressing <b>STRENGTH</b> or reduce the quantity of pre-ground coffee (maximum one measure).

## ALERTS

DISPLAYED MESSAGE	POSSIBLE CAUSE	WHAT TO DO
<p><b>Ground too fine. Adjust mill 1 click while in operation</b></p>	<p>The grinding is too fine and the coffee is delivered too slowly or not at all.</p> <p>If you're using a water softener filter, an air bubble may have been released inside the circuit, obstructing delivery.</p>	<p>Repeat coffee delivery and turn the grinding adjustment dial one click clockwise towards 7 while the coffee mill is in operation. If after making at least two coffees, delivery is still too slow, repeat the correction procedure, turning the grinding adjustment dial another click until delivery is correct (see section 'Adjusting the coffee mill'). If the problem persists, make sure the water tank is fully inserted.</p> <p>Deliver some water through the hot water spout until the flow becomes regular.</p>
<p><b>GENERAL ALARM: REFER TO USER MANUAL</b></p>	<p>The inside of the appliance is very dirty.</p>	<p>Clean the inside of the appliance thoroughly, as described in section 'Care and cleaning'. If the message is still displayed after cleaning, contact Customer Care.</p>
	<p>The appliance needs descaling and/or the filter must be replaced.</p>	<p>The descaling procedure described in the 'Descaling' section, needs to be performed and/or the filter needs replacing or removing as described in section 'Water filter'.</p>
	<p>The tubes inside the milk container must be cleaned.</p>	<p>Turn the froth adjustment dial to <b>CLEAN</b>.</p>
	<p>The filter must be replaced.</p>	<p>Replace the filter or remove it as described in section 'Water filter'.</p>
	<p>The machine must be descaled.</p>	<p>The descaling procedure described in section 'Descaling' needs to be performed.</p>
	<p>The auto-start function is enabled.</p>	<p>To disable the function, refer to the instructions under 'Auto start'.</p>
	<p>Energy saving is enabled.</p>	<p>To disable energy saving, refer to instructions under 'Settings'.</p>

## ALERTS

DISPLAYED MESSAGE	POSSIBLE CAUSE	WHAT TO DO
Insert water spout	The hot water spout is not inserted or is not inserted correctly.	Insert the water spout as far as it will go.
Insert milk container	The milk container is not inserted correctly.	Insert the milk container as far as it will go.
Insert infuser assembly	The infuser has not been replaced after cleaning.	Insert the infuser as described in section 'Cleaning the infuser'.
Water circuit empty press ok to start filling process	The water circuit is empty.	Press <b>OK</b> to deliver water from the spout until it flows out normally. Delivery stops automatically. If the problem persists, make sure the water tank is fully inserted.
Press ok to start cleaning process or turn milk froth adjustment dial	The milk container has been inserted with the froth adjustment dial in the <b>CLEAN</b> position.	To proceed with the <b>CLEAN</b> function, press <b>OK</b> or turn the froth adjustment dial to one of the milk positions.
Turn dial to <b>CLEAN</b> position to start cleaning	Milk has been delivered recently and the tubes inside the milk container must be cleaned.	Turn the froth adjustment dial to <b>CLEAN</b> .
Turn the milk froth adjustment dial to milk position	The milk container has been inserted with the froth adjustment dial in the <b>CLEAN</b> position.	Turn the dial to the required froth position.
Descaling needed press ok to start (~45min)	The machine must be descaled.	Press <b>OK</b> to start descaling or <b>BACK</b> to descale later. The descaling procedure described in section 'Descaling' needs to be performed.
Replace water filter press OK to start	The water softener filter is exhausted.	Press <b>OK</b> to replace or remove the filter, or <b>BACK</b> to carry out the procedure later. Follow the instructions in section 'Water filter'.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
<b>The coffee is not hot</b>	The cups were not preheated.	Warm the cups by rinsing them with hot water (Note: you can use the hot water function).
	The infuser has cooled down because two to three minutes have elapsed since the last coffee was made.	Before making the coffee, heat the infuser by rinsing using the rinse function (see section 'Rinsing the coffee maker').
	A low coffee temperature is set.	Set a hotter coffee temperature in the menu (see section 'Settings').
<b>The coffee is weak or not creamy enough</b>	The coffee is ground too coarsely.	Turn the grinding adjustment dial one click counter clockwise towards 1 while the coffee mill is in operation. Continue one click at a time until you reach the desired coffee delivery. The effect is only visible after delivering two coffees (see section 'Adjusting the coffee mill'). If coffee is still not to your preference, try using a different brand of coffee.
<b>The coffee is delivered too slowly or a drop at a time</b>	The coffee is ground too finely.	Turn the grinding adjustment dial one click clockwise towards 7 while the coffee mill is in operation above figure. Continue one click at a time until you reach the desired coffee delivery. The effect is only visible after delivering two coffees (see section 'Adjusting the coffee mill').
<b>Coffee does not come out of one or both of the spouts</b>	The coffee spouts are blocked.	Clean the spouts with a toothpick.
<b>The appliance will not make coffee</b>	The appliance has detected impurities in its internal circuits. <b>CLEANING UNDERWAY</b> is displayed on the screen.	Wait for the appliance to be ready for use again and reselect the required drink. Contact Customer Care if the problem persists.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
<b>The appliance does not turn on</b>	It is not plugged into the mains socket.	Plug into the mains socket.
	The main switch is not turned on.	Press the main switch.
<b>The infuser cannot be extracted</b>	The appliance has not been turned off correctly.	Turn the appliance off by pressing the standby button (see section 'Turning the coffee maker off').
<b>At the end of descaling, the appliance requests a third rinse</b>	During the two rinse cycles, the water tank has not been filled to the <b>MAX</b> level.	Follow the instructions displayed by the appliance, but first empty the drip tray to avoid the water overflowing.
<b>The milk does not come out of the milk spout</b>	The lid of the milk container is dirty.	Clean the milk container lid as described in the 'Cleaning the milk container' section.
<b>The milk contains large bubbles and squirts out of the milk spout or there is little froth</b>	The milk is not cold enough, or is not light or skimmed milk.	Use light or skimmed milk at refrigerator temperature (about 41°F (5°C)). If the result is not as you wished, try using a different brand of milk.
	The froth adjustment dial is incorrectly adjusted.	Adjust following the instructions in the 'Adjusting the foam level' section.
	The milk container lid or froth adjustment dial is dirty.	Clean the milk container lid and froth adjustment dial as described in the 'Cleaning the milk container' section.
	The hot water/steam connection nozzle is dirty.	Clean the connection nozzle. See 'Care and cleaning'.
<b>The machine emits noises or small puffs of steam while not in use</b>	The machine is ready for use, or has recently been turned off, and condensation is dripping into the hot vaporiser.	This is part of normal operation. To limit this occurring, empty the drip tray.

## WARRANTY AND SERVICE

---

### **Before you call for service or assistance...**

Check the things you can do yourself. Refer to the installation instructions and your user guide and check that:

- ① Your product is correctly installed.
- ② You are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to the Service & Warranty book for warranty details and your nearest Authorized Service Centre, Customer Care, or contact us through our website [fisherpaykel.com](http://fisherpaykel.com).

### **Complete and keep for safe reference:**

Model	_____
Serial No.	_____
Purchase Date	_____
Purchaser	_____
Dealer	_____
City	_____
State	_____
Zip	_____
Country	_____



**FISHERPAYKEL.COM**

© Fisher & Paykel Appliances 2021. All rights reserved.

The models shown in this guide may not be available in all markets  
and are subject to change at any time.

The product specifications in this guide apply to the specific products and  
models described at the date of issue. Under our policy of continuous product  
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,  
please go to our website or contact your local Fisher & Paykel dealer.

**592467A 10.21**